


Things to check if your laminator will not run


Is the emergency stop button pressed down?
If so twist to the right and it will pop up.



Is the roller cover in place and locked into position

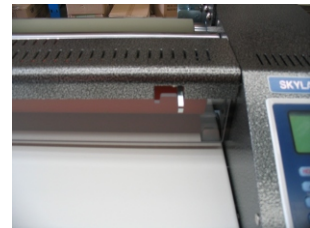

Is the feed table in the correct place

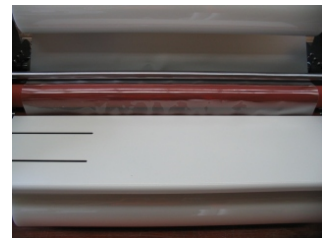

Key pad operation.

Hot - to warm up

Cold - to cool down



Run - to go

Stop - to stop